

Trendy MIRRORS

GLASS SPLASHBACKS




Colour - Sky Blue



Custom Resene or Dulux Colours
Custom Size, Shapes and Cut outs

- Easy to clean
- High gloss painted glass
- Toughened safety glass
- Easy DIY installation

Standard sizes: 750x600mm and 900x750mm

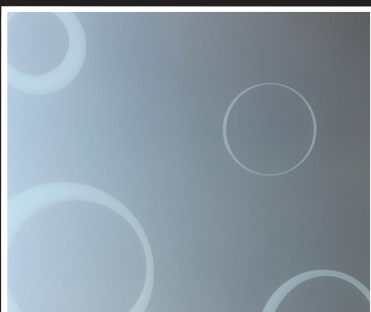

Circles


Metallic Silver with Metallic White Circles



Waves

Metallic Silver with Metallic Grey Waves


14 Stunning Colours and
Custom Colours

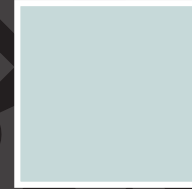

Glacier White



Half Tea

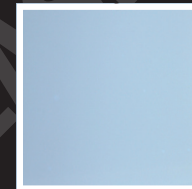

Sky Blue




Pukaki Blue




Avocado



Lime

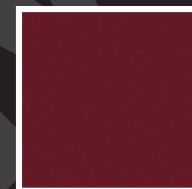

Red Cherry

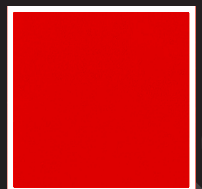

Vivid Red


Sparkle Metallic Colours




Metallic White



Metallic Silver

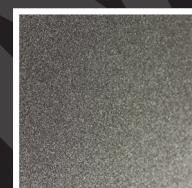


Metallic Grey

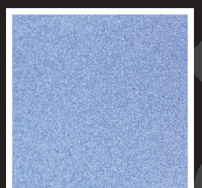

Metallic Blue



Metallic Black

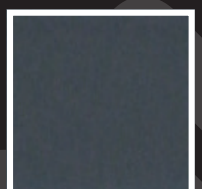

Grey Mirror

TrendyMIRRORS

When only the best reflection will do since 1985

Installation: Our splash backs are designed for DIY.

You will need a tube of clear neutral cure silicon. This is standard plumbing silicon which is often clear in colour. Supplied with the splash back is double side adhesive. The adhesive is used to hold the splash back against the wall for 24 – 48 hours whilst the glue dries.

- Step 1** Check your wall is flat and level, if the wall is bowed then you will need to level the wall to glue fix the splash back.
- Step 2** Place a soft rug, cardboard or packaging on any hard surfaces you will be placing the splash back.
- Step 3** Use a damp cloth (water only), clean & dry the wall surface and the back of the splash back thoroughly. (Do not use chemicals)
- Step 4** Position the splash back on the wall to check the size and fit. Carefully place the splash back onto a soft surface (the edges will chip on hard surfaces).
- Step 5** Apply a generous amount of neutral cure silicon onto the back of the splash back, be careful not to apply the glue too close to the edge to avoid the glue squirting out the sides.
- Step 6** Remove the protective peel on the double sided tape.
- Step 7** Carefully position the splash back bottom first against the wall, press firmly on the splash back to spread the silicon glue.
(You will only have one attempt to position it correctly as the tape is only designed to stick once. Try and avoid removing the splash back and repositioning it. If you must do this then be sure to brace the splash back for 48 hours as the stick of the tape will not be 100%.)
- Step 8** If your splash back is not resting on a bench or surface then it is recommended you brace the splash back for 48 hours so it does not slip. Duct tape or a timber brace is commonly used. Please be aware duct tape will pull paint off the wall.

If your splash back is resting on a surface then the tape will stop it falling forward whilst the glue dries.



Colour - Red Cherry



Colour - Metallic Silver